






LYNX 5200 SERIES SECURITY SYSTEM AT A GLANCE

Zone Status






The following icons will be displayed on the Zone Status screen along with zone status information when a zone has been faulted, bypassed or is in alarm:

Display	Definition
	Alarm
	Fault (Yellow)

Display	Definition
	Ready
	Bypass


Display	Definition
	Trouble (red)

Arming the System

Stay		<ul style="list-style-type: none"> Used when you want to arm the system with persons staying inside (or if you have pets that are moving throughout the premises). Arms perimeter zones; interior zones left disarmed. An alarm sounds if any protected window or non-entry/exit door is opened.
Instant Stay	Instant tab + 	<ul style="list-style-type: none"> Used when staying inside and you do not expect anyone to use an entry/exit door. Same as Stay mode, except entry delay is off. An alarm sounds same as Stay mode, and sounds upon opening entry/exit doors.
Away		<ul style="list-style-type: none"> Used when nobody is staying inside (including pets). Arms the entire system (interior and perimeter). An alarm sounds if a protected window or any door is opened, or if any movement is detected inside.
Quick Arming	 OR 	<ul style="list-style-type: none"> If programmed, you can press the Quick Arm button (when the keypad appears) in place of your security code when arming the system.

Disarming the System and Silencing Alarms

The "Disarm" icon is used to disarm the system, silence alarm or trouble sounds, and clear memory of alarm displays. Select the icon or key and enter the 4-digit Security Code.

Mode	Press these keys or icons...	What happens
Disarm and Silence Alarms		<ul style="list-style-type: none"> System is disarmed and alarm sounding is silenced. To clear the memory of alarm display (if present), enter a second Off Sequence. To Silence a Fire Alarm or Carbon Monoxide, Simply enter an "Off" sequence.



Any questions or problems
Atlantic Security
FL 904-743-8444 GA 912-264-8679
Service@atlanticcompanies.net